


PARABODY®

821 HYPEREXTENSION ROMAN CHAIR



WARNING:

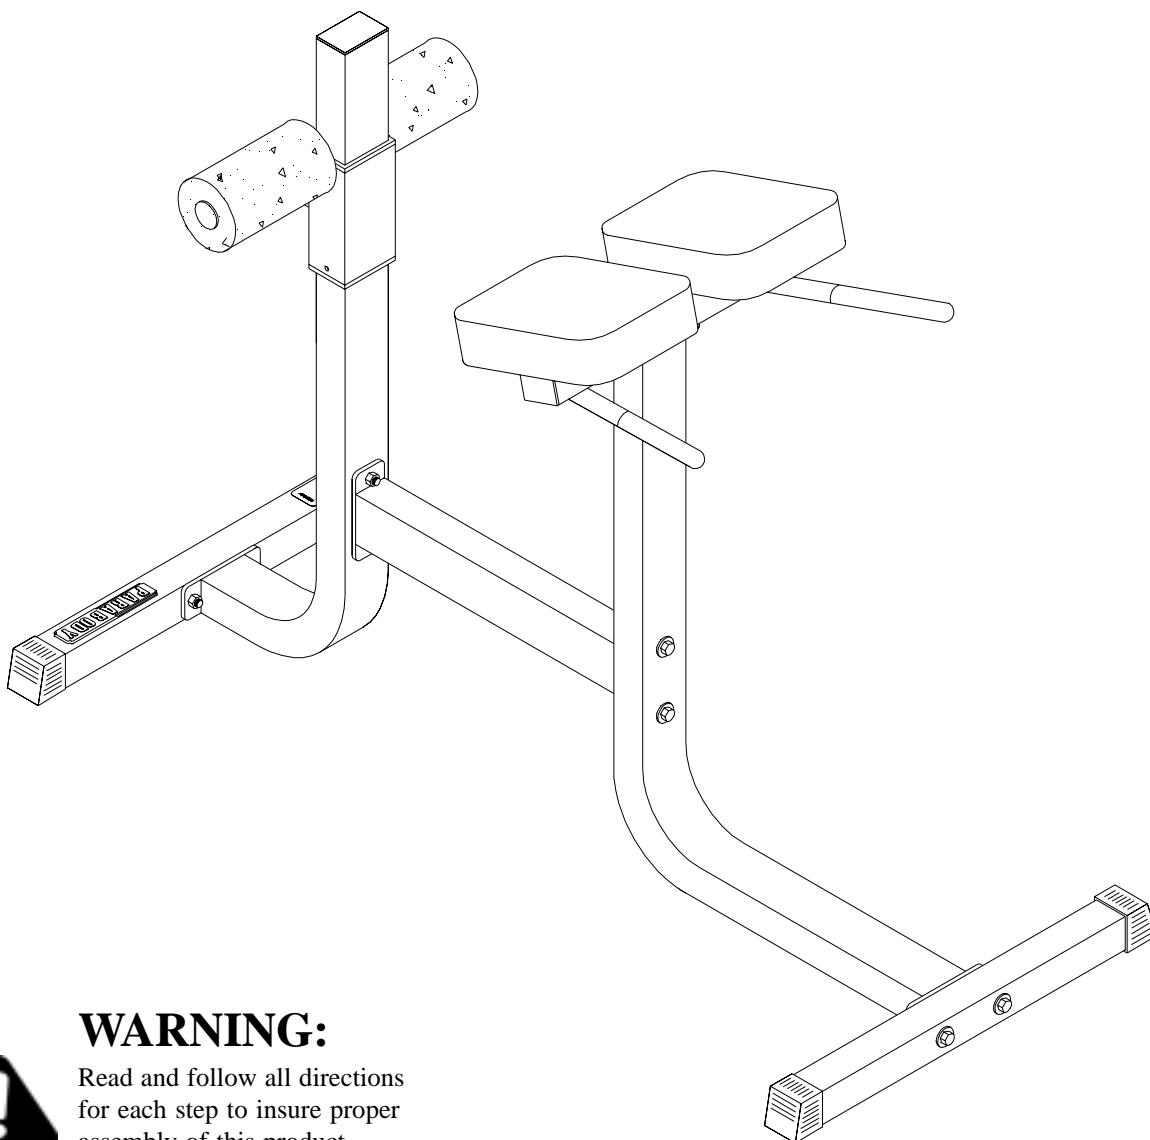

Read and follow all directions
for each step to insure proper
assembly of this product.

USER'S GUIDE

TABLE OF CONTENTS

Safety Statement.....	2	Parts list.....	5
General Notes.....	3	Assembly Instructions.....	5-8
Tools Required.....	3	General Maintenance.....	9
Gym Layout.....	4	Warranty Statement.....	10
		Product Services.....	11
		Insert-Registration Card	

IMPORTANT SAFETY INFORMATION



THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT. TO MINIMIZE RISK FOLLOW THESE RULES!

1. Before using, read all the warnings and instructions on the use of this machine. Use only for intended exercise. **DO NOT** modify the machine.
2. Obtain a medical exam before beginning any exercise program.
3. Keep body and clothing free of all moving objects.
4. Inspect the machine before use. **DO NOT** use it if it appears damaged. **DO NOT** attempt to fix a broken or jammed machine. Notify your authorized ParaBody dealer before use and have repairs made by an authorized service technician.
5. Be certain that weight pin is completely inserted. Use only the pin provided by the manufacturer. If unsure, call your authorized ParaBody dealer.
6. Never pin the weights or prop plate into an elevated position. **DO NOT** use the machine if found in this condition. **DO NOT** attempt to fix. Notify your authorized ParaBody dealer.
7. Inspect cables and their connections before using machine. Pay particular attention to the cable ends. **DO NOT** attempt to fix. Notify your authorized ParaBody dealer before use and have repairs made by an authorized service technician.
8. Make sure all spring loaded pull pins are fully engaged in the adjustment position and fully tighten thumbscrew before use.
9. Children must not be allowed near this machine. Supervise teenagers.

NOTE: In a continual effort to improve our products, specifications are subject to change
© 2001 Life Fitness, a division of Brunswick Corporation. All rights reserved.
ParaBody is a trademark of Brunswick Corporation

www.parabody.com

IMPORTANT NOTES

Please note:


- * Thank you for purchasing the ParaBody 821 Gym System. Please read these instructions thoroughly and keep them for future reference. This product must be assembled on a flat, level surface to assure its proper function.
- * This product must be assembled on a flat, level surface to assure its proper function. **DO NOT** securely tighten any frame connections until the entire frame has been assembled, unless otherwise stated.

Tools Required for Assembly


- * 3/4" wrench
- * 9/16" wrench
- * Ratchet with 3/4" and 9/16" sockets
- * Adjustable wrench
- * Tape measure


Bolt Length Ruler

NOTE: BOLT LENGTH IS MEASURED FROM THE UNDERSIDE OF THE HEAD OF THE BOLT.

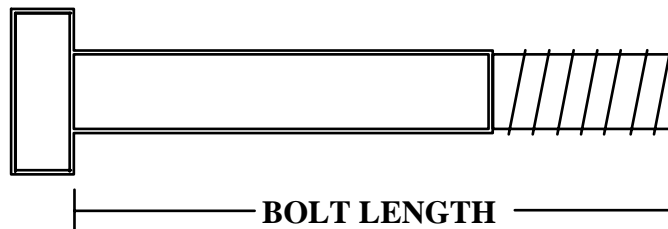

BOLT LENGTH RULER:



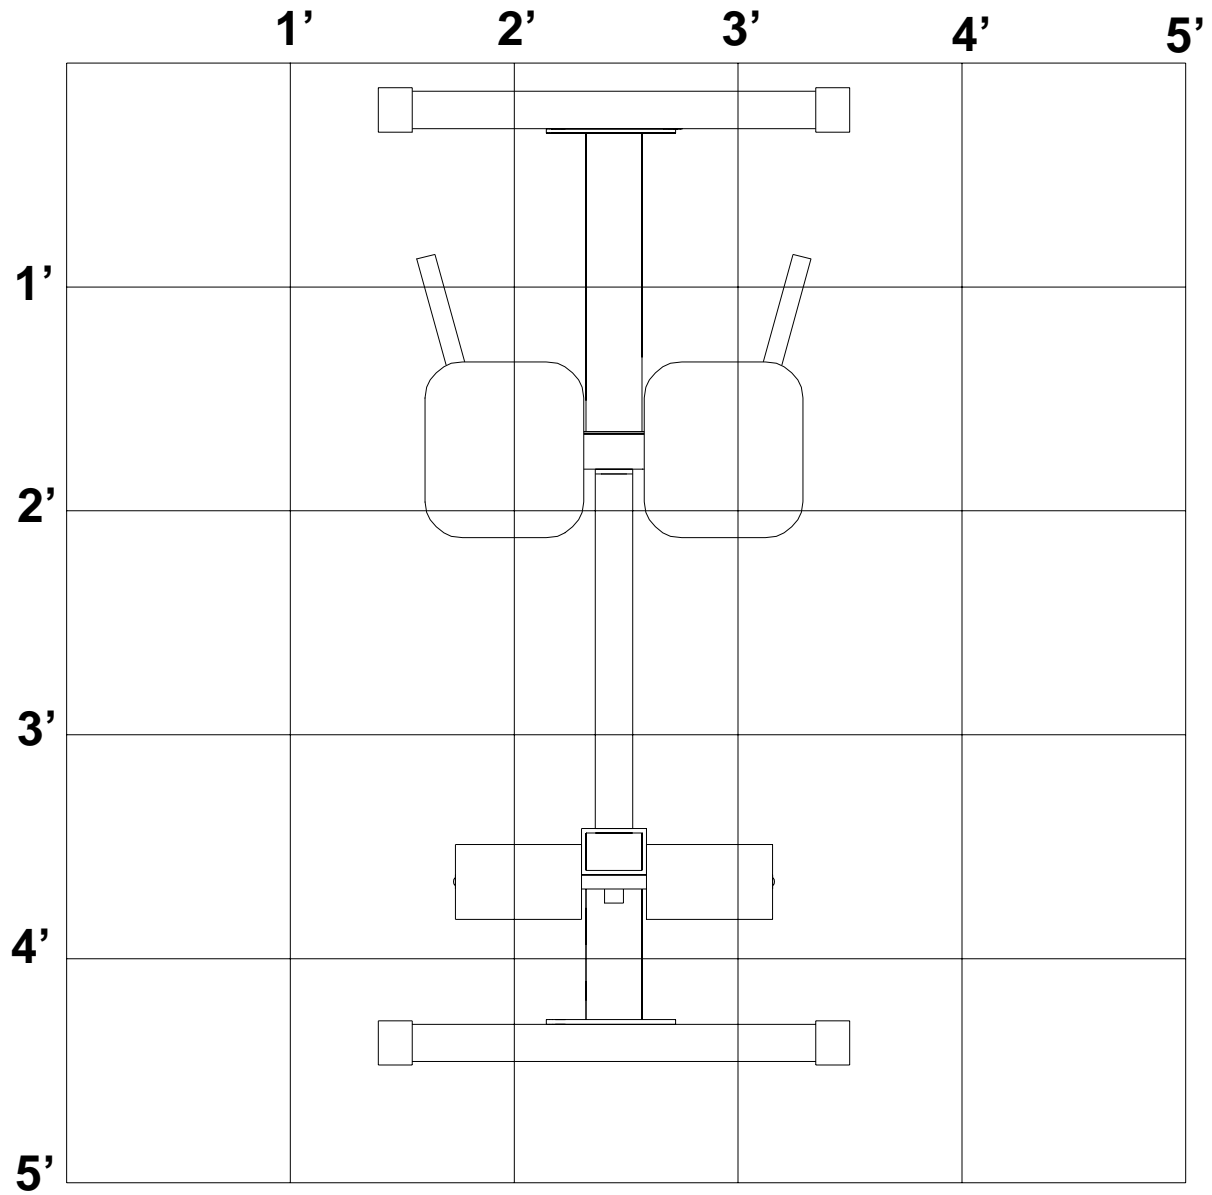

1 Square = 1' X 1'

PARTS LIST

KEY	PART #	DESCRIPTION	QTY
1	LEA 6588710	ROLLER PAD SUPPORT	1
2	LEA 6511709	BASE TUBE	2
3	LEA 6588309	HIP PAD SUPPORT	1
4	LEA 6588509	CROSS BRACE	1
5	LEA 6588909	FRONT UPRIGHT	1
6	LEA 6589109	REAR UPRIGHT	1
7	LEA 6589321	PAD ASSEMBLY	2
8	LEA 6194601	ROLLER PAD	2
9	LEA 3235205	3/8 X 1-1/4" BOLT	5
10	LEA 3235212	3/8 X 3" BOLT	2
11	LEA 3235312	1/2 X 3" BOLT	8
12	LEA 3114702	3/8" LOCK NUT	3

KEY	PART #	DESCRIPTION	QTY
13	LEA 3114502	3/8" LOCK WASHER	4
14	LEA 3114403	3/8" WASHER	10
15	LEA 3114401	1/2" WASHER	8
16	LEA 3114701	1/2" LOCK NUT	8
17	LEA 7234801	2" SQ. COVER CAP	4
18	LEA 6692601	3 X 2" END CAP	1
19	LEA 3105401	STARLOCK COLLAR	2
20	LEA 3103102	1 X 8" GRIP	2
21	LEA 6590801	3 X 2" INSERT GUIDE	2
22	LEA 6412001	3/8" SPRING PIN ASSY	1
23	LEA 6405201	2" SQ. END CAP	2

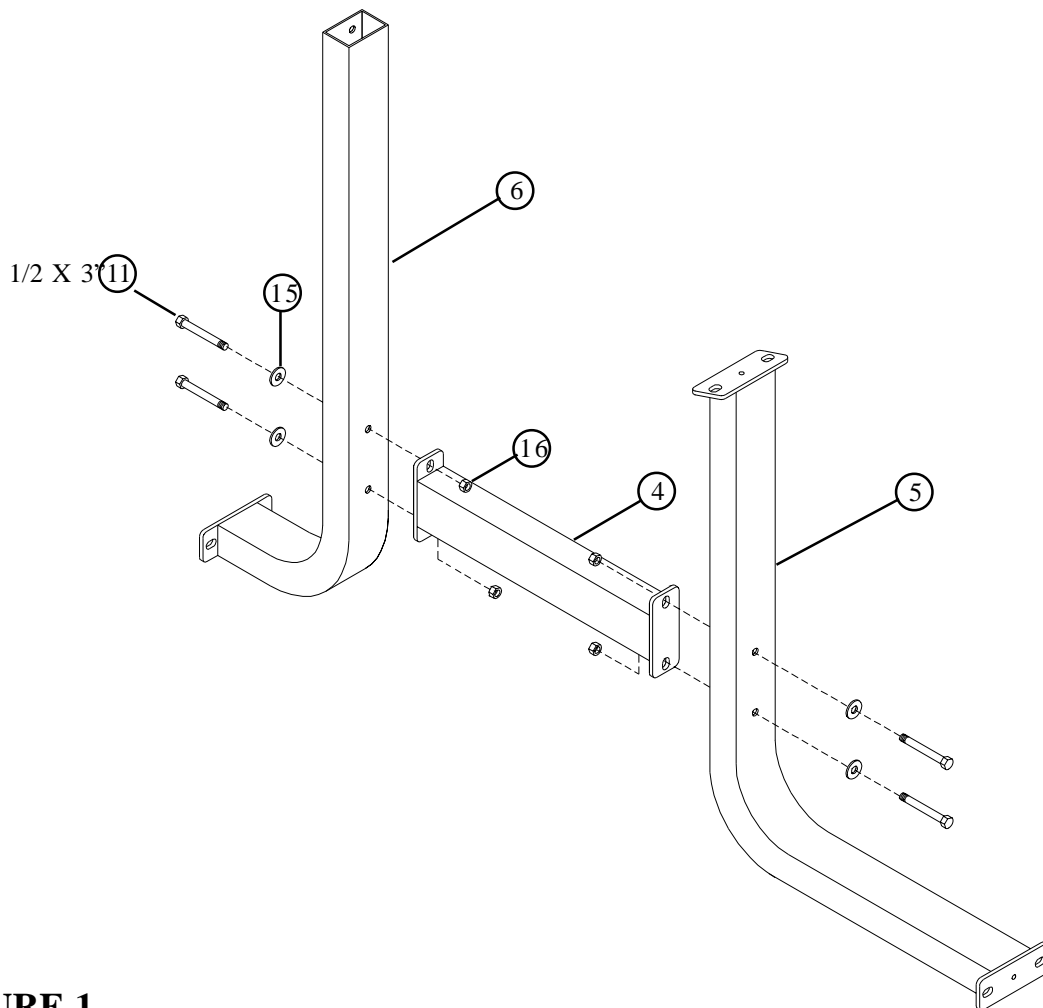


FIGURE 1

STEP 1:

- **SECURELY** assemble the CROSS BRACE (4) to the FRONT and REAR UPRIGHTS (5 & 6) using four 1/2 X 3" BOLTS (11), four 1/2" WASHERS (15) and four 1/2" LOCK NUTS (16) as shown in FIGURE 1.

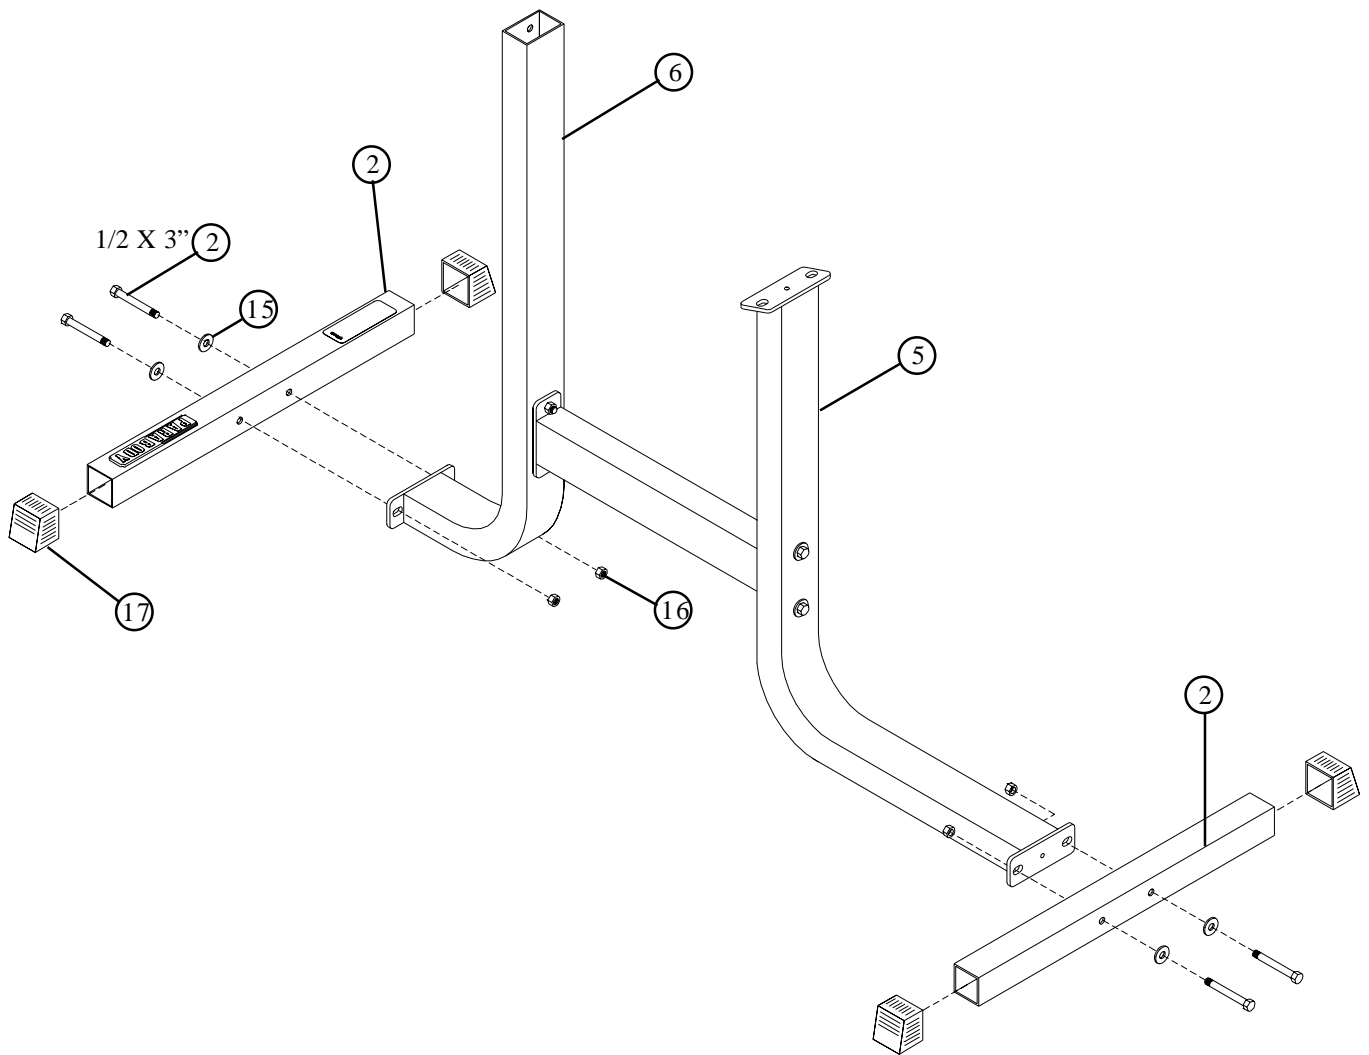



FIGURE 2

STEP 2:

- Insert four 2" SQ. COVER CAPS (17) into the ends of the BASE TUBES (2) as shown in FIGURE 2.
- **SECURELY** assemble the BASE TUBES (2) to the FRONT and REAR UPRIGHTS (5 & 6) using four 1/2 X 3" BOLTS (11), four 1/2" WASHERS (15) and four 1/2" LOCK NUTS (16) as shown in FIGURE 2.



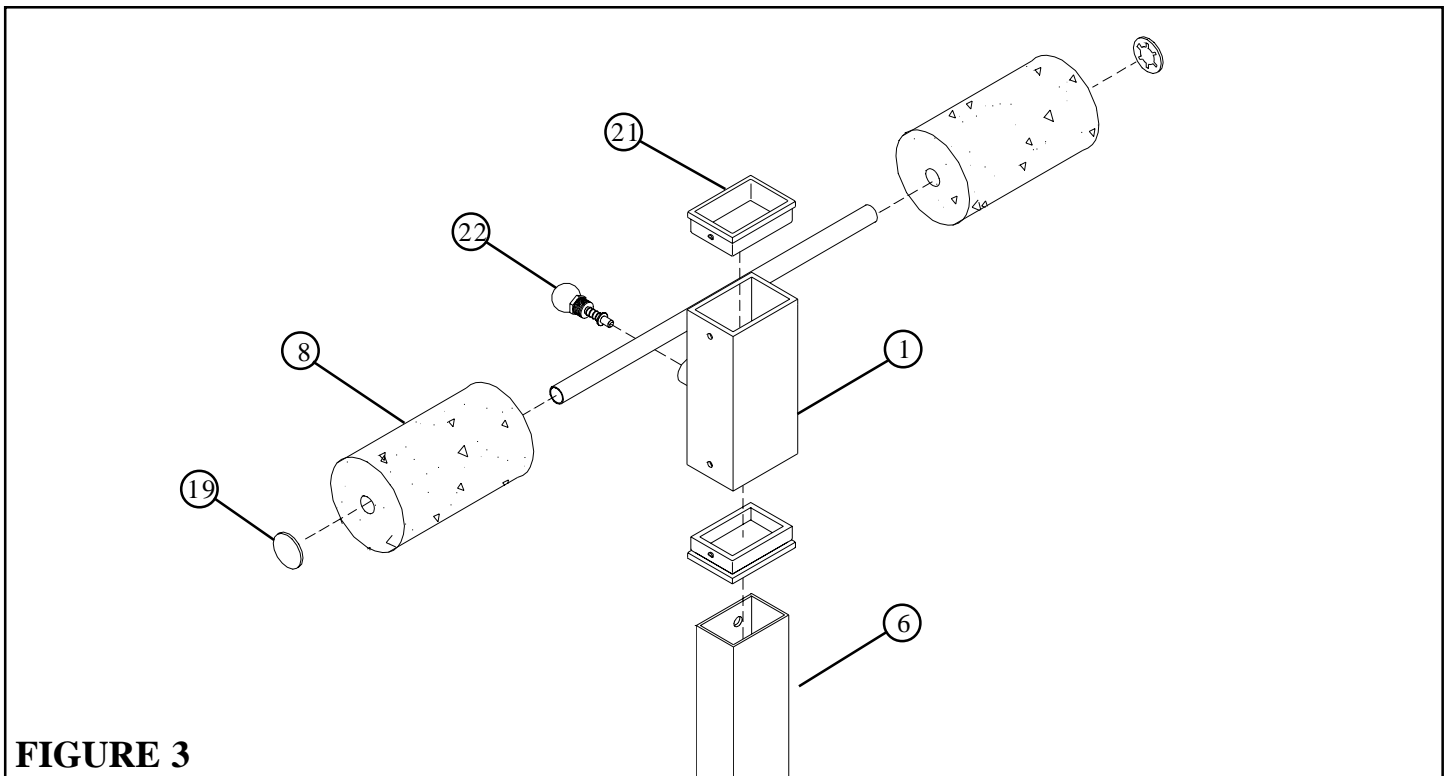


FIGURE 3

STEP 3:

- Insert two 3 X 2" INSERT GUIDES (21) into the end of each of the ROLLER PAD SUPPORT (1) as shown in FIGURE 3.
- **SECURELY** assemble the SPRING PIN ASSEMBLY (22) to the ROLLER PAD SUPPORT (1). See FIGURE 3.
- Slide the two ROLLER PADS (8) onto the ROLLER PAD SUPPORT (1) using two STARLOCK COLLARS (19) as shown in FIGURE 3.
- Pull back the SPRING PIN and **CAREFULLY** slide the ROLLER PAD SUPPORT (1) over the REAR UPRIGHT (6). as shown in FIGURE 3.

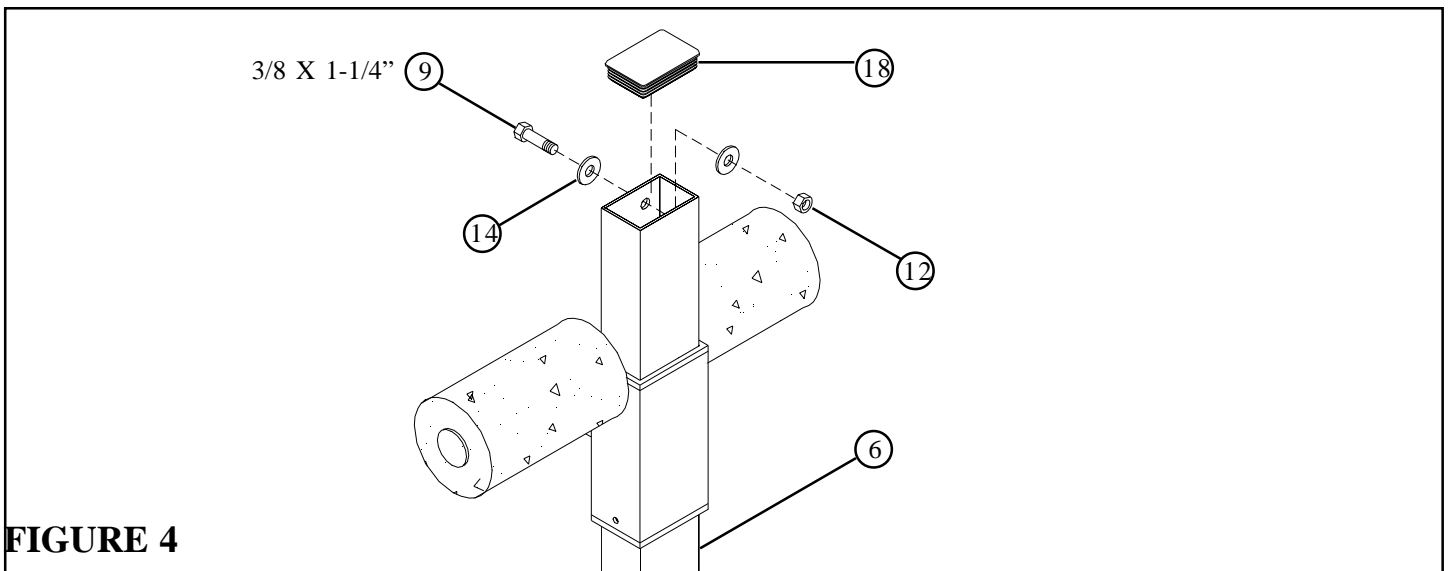


FIGURE 4

STEP 4:

- **SECURELY** assemble on 3/8 X 1-1/4" BOLT (9), two 3/8" WASHERS (14), and one 3/8" LOCK NUT (12) into the top hole on the REAR UPRIGHT (6). See FIGURE 4.
- Insert one 3 X 2" END CAP (18) into the top of the REAR UPRIGHT (6) as shown in FIGURE 4.

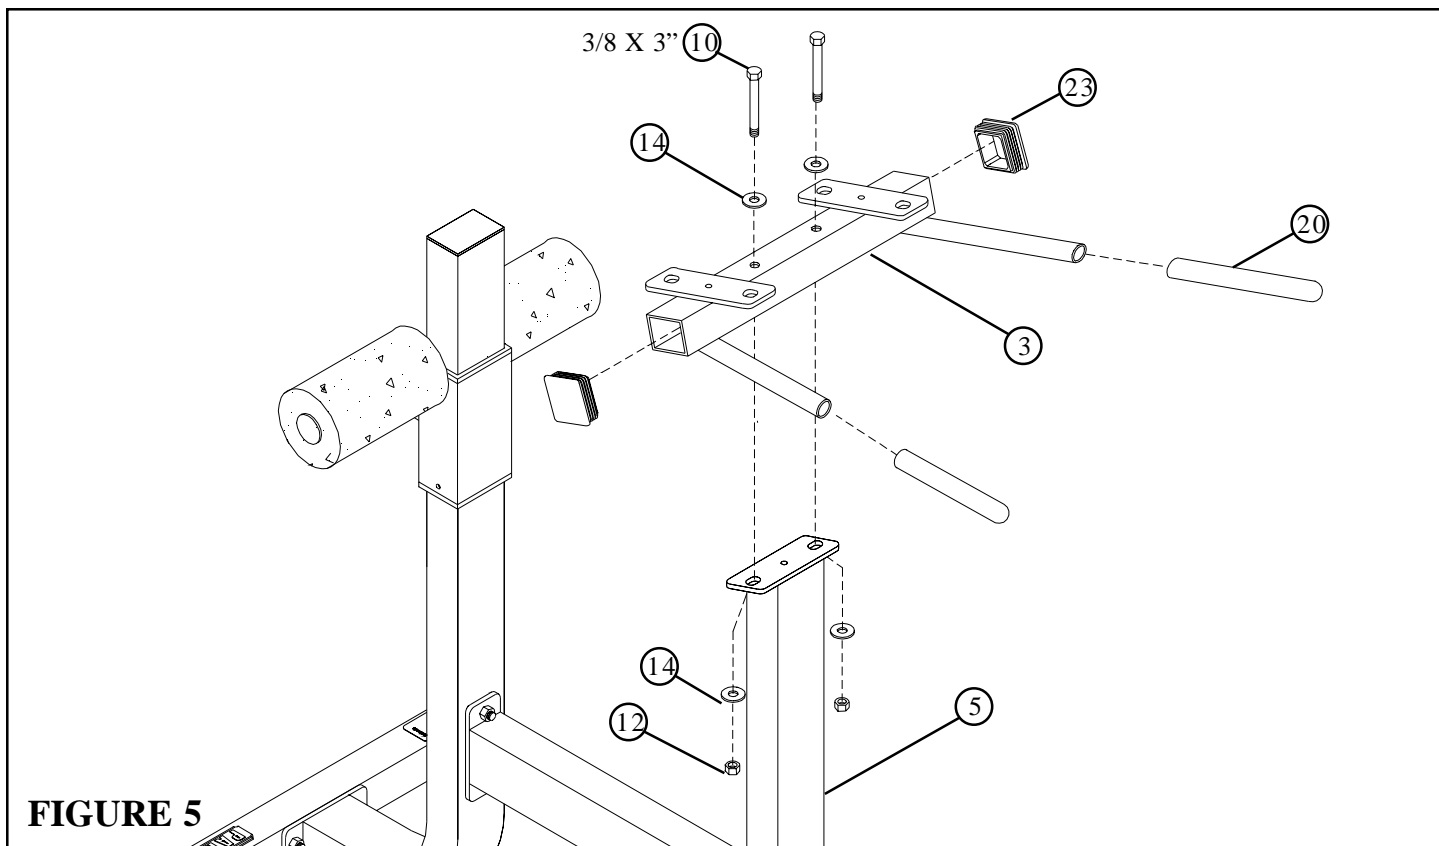


FIGURE 5

STEP 5:

- Insert two 2" SQ. END CAPS (23) into the ends of the HIP PAD SUPPORT (3) as shown in FIGURE 5.
- **SECURELY** assemble the HIP PAD SUPPORT (3) to the FRONT UPRIGHT (5) using two 3/8" X 3" BOLTS (10), four 3/8" WASHERS (14), and two 3/8" LOCK NUTS (12). See FIGURE 5.
- Slide two 1 X 8" GRIPS (20) onto the HIP PAD SUPPORT (3). (Using water will help slide them on.)


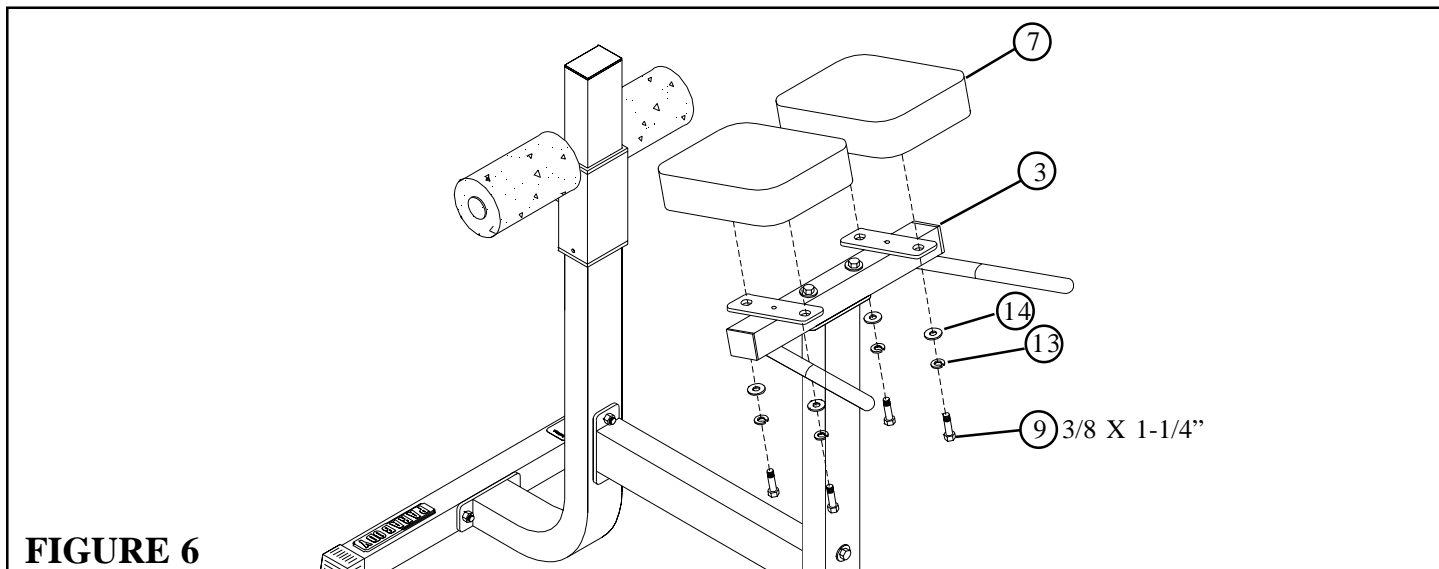


FIGURE 6

STEP 6:

- **SECURELY** assemble the PADS (7) to the HIP PAD SUPPORT (3) using two 3/8" X 1-1/4" BOLTS (9), four 3/8" WASHERS (14), four 3/8" LOCK WASHERS (13). See FIGURE 6.

THIS CONCLUDES THE ASSEMBLY OF THE 821 HYPEREXTENSION ROMAN CHAIR

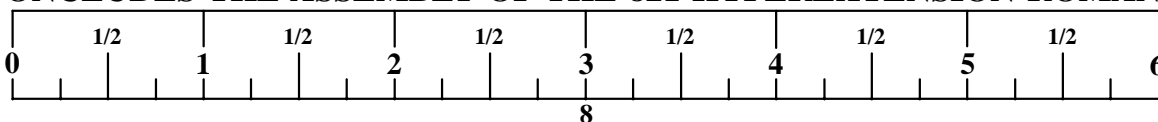

MAINTENANCE

Please note:

- * We recommend cleaning your product (pads and frame) on a regular basis, using warm soapy water. Touch-up paint can be purchased from your ParaBody customer service representative at (800) 328-9714.
- * Inspect equipment daily. Tighten all loose connections and replace worn parts immediately. Failure to do so may result in serious injury.
- * **PLEASE RECORD THE INFORMATION REQUESTED BELOW. IN THE EVENT YOU MAY NEED SERVICE YOU WILL BE ASKED FOR THIS INFORMATION. REMEMBER TO FILL OUT YOUR WARRANTY REGISTRATION CARD AND MAIL BACK.**


MODEL # _____

SERIAL # _____

DATE OF PURCHASE: _____

DEALERS NAME: _____

DEALERS PHONE # _____

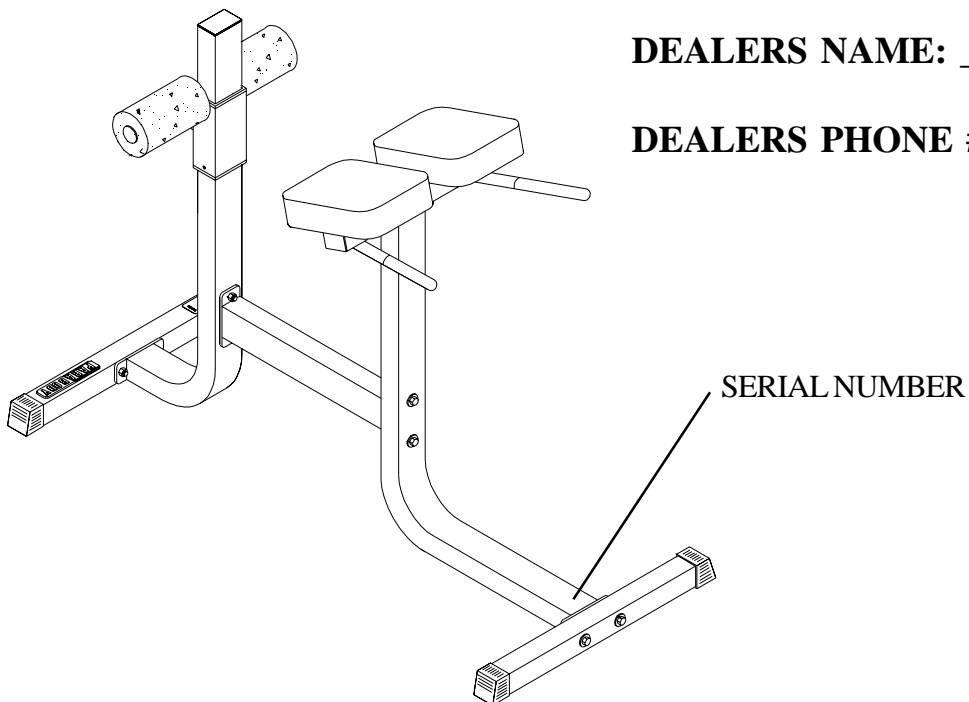

Thank you for purchasing the ParaBody 821 Gym System.

LIMITED WARRANTY

ParaBody extends the following LIMITED WARRANTY to the original owner of the ParaBody products. The Warranty terms apply to IN HOME USE ONLY.

1. **LIMITED WARRANTY ON FRAME AND WELDS.** If the frame of the ParaBody product or a weld should crack or break, it will be repaired or replaced by ParaBody. Terms: Lifetime – for so long as the Customer owns the ParaBody product.
2. **LIMITED WARRANTY ON PARTS.** If the following parts are defective in material or workmanship, ParaBody will supply replacement parts: all bolts, nuts, washers, bearings, bushings, pulleys, thumbscrews, collars, cable retaining clips, adjustable pre-stretch slides, roller pad shafts, allen head bolts, weight selector pin, weight stack shaft, set screws, protector caps, adjustment chain, cotter pin, plunger, spring and knob. Terms: Lifetime – for so long as the Customer owns the ParaBody product.
3. **LIMITED WARRANTY ON CABLES AND UPHOLSTERY.** If the coated cables or upholstery are defective in material or workmanship, ParaBody will repair or replace them, at its option. Terms: Three (3) years.
4. **CONDITIONS AND EXCEPTIONS.** Any product misuse, abuse or alteration, any attempt to repair by a person other than an authorized ParaBody Service Center, any improper assembly, accident, or any other condition resulting from occurrences beyond the control of ParaBody will void this Limited Warranty.
5. **REPLACEMENT AND REPAIR EXPENSES.** ParaBody will provide only replacement parts or repair under this warranty. The Owner is responsible for all other costs. Such costs may include, but are not limited to: a. labor charges for service, removal, repair or reinstallation of the ParaBody product or any component part; b. shipping, delivery, handling and administrative charges for returning parts to ParaBody; and c. all necessary or incidental costs related to installation of the replacement parts.
6. **SHIPPING.** If shipping by the Owners is deemed necessary (in sole discretion of ParaBody), parts should be shipped in their original carton or equivalent packaging, fully insured with shipping charges prepaid. ParaBody will not assume any responsibility for any loss or damage incurred in shipping.
7. **CLAIM PROCEDURES.** If service on your ParaBody product is required during the warranty period, please contact our Customer Service Department at 1-800-328-9714 for instructions regarding returning or replacing parts. Please have available the following information: (i) the dealer's name; (ii) the date of purchase; (iii) the serial # (s) of your product (the serial number location is called out on the final assembly drawing included with your assembly instruction); (iv) a description of the nature of the problem.
8. **OWNER'S RIGHT.** This Limited Warranty gives you specific legal rights. You may also have other rights, which vary depending on local law.
9. **LIMITATION OF IMPLIED WARRANTIES.** All implied warranties, except to the extent prohibited by applicable law, shall have no greater duration than the warranty period set forth above. There are no warranties which extend beyond the description in this Limited Warranty. Because local laws do not allow limitations on how long an implied warranty lasts, the above limitations may not apply to you.
10. **DISCLAIMER.** No other express warranty has been made or will be made on behalf of ParaBody with respect to any ParaBody product or the operation, repair or replacement of any ParaBody product. ParaBody shall not be responsible for injury, loss of use of the ParaBody product, inconvenience, loss or damage to personal property, whether direct or indirect, and incidental or consequential damages, so the above limitation or exclusion may not apply to you.

NOTES:

LIFE FITNESS CONSUMER DIVISION

14150 Sunfish Lake Blvd. Ramsey Minnesota, 55303 U.S.A.

Tel: 763.323.4500 Fax: 763.323.4797

800.328.9714 (Toll-free within the U.S. and Canada)

www.parabody.com

INTERNATIONAL OFFICES

Life FitnessAtlantic BV
Atlantic Headquarters
Bijdorpplein 25-31
2992 LB Barendrecht
The Netherlands
Phone: (180) 646 666
Fax: (180) 646 703

Life Fitness EUROPE GmbH
Siemensstrasse 3
85716 Unterschleissheim
Germany
Phone: (089) 31 77 51-0
Fax: (089) 31 77 51 99

Life Fitness Italia S.R.L.
Via Elvas 92
39042 Bressanone
Italy
Phone: 39 (472) 835-470
Fax: 39 (472) 833-150

Life Fitness Asia Pacific Limited
Room 2610, Miramar Tower
132 Nathan Road, Tsimshatsui
Kowloon, Hong Kong
Phone: (852) 2891-6677
Fax: (852) 2575-6001

Life Fitness (UK) Ltd.
Queen Adelaide
Ely, Cambs CB7 4UB
United Kingdom
Phone CSS: (01353) 665507
Fax CSS: (01353) 666719

Life Fitness Benelux N.V.
Bijdorpplein 25-31
2992 LB Barendrecht
The Netherlands
Phone: 31 (180) 64 66 69
Fax: 31 (180) 64 66 99

Life Fitness Japan
8/F, Nippon Brunswick Building
5-27-7 Sendagaya
Shibuya-Ku, Tokyo 151-0051
Japan
Phone: 81 (3) 3359-4309
Fax: 81 (3) 3359-4307

Life Fitness Do Brazil
Al. Rio Negro, 433-Predio 2-Sala 2
3º andar (Confab)
Aplherville-Barueri-Sao Paulo
CEP: 06454-904
Brazil
Phone: 55 (11)7295-2217
Fax: 55 (11) 7295-2218